PLEASE READ ALL INFORMATION AND FOLLOW INSTRUCTIONS BEFORE USING THIS PRODUCT

Thank you for purchasing the USB4000 Backup Charger. This manual contains instructions on how to properly use your rechargeable battery pack. This battery pack functions as a backup power device with 5V outputs ideal for charging iPhone®, iPod®, MP3 players, cell phones, Bluetooth® headsets, and other small electronic devices.

Safety Precautions

Please read the following before using the product. Incorrect use or incompatibility with your device may result in reduced battery performance or damage to your device.

- Check device voltage for compatibility with this product.
- Do not attempt to disassemble this product.
- Store and operate between 32°F - 113°F.
- Do not keep this product in contact with liquids.
- Do not place this product near a heat source or flame.
- Do not shake or throw the battery device.
- Do no crush or puncture the battery.
- Recharge the battery every 3 months when not in use to keep the battery fresh.
- Do not overcharge. You should not keep the battery in continuous charging for more than 24 hours.

Product Specifications

- Lithium-Polymer battery: 4000mAh Capacity
- Output voltage: 5V
- Output current: 800mAh
- AC/DC charging time: 6-8 hours

LED Indicator Lights

RED: Power is going in and/or out (charging device or battery)

GREEN:

4 LED: 90% - 100% power
3 LED: 60% - 90% power
2 LED: 30% - 60% power
1 LED: 10% - 30% power

Operating Instructions

1. Always charge your USB4000 the first time for a full 8 hours from AC or DC before regular use. Standard charging times will be shorter thereafter.
There are 3 methods to charge your USB4000:
   a. Use the included AC and USB cable to charge from any standard wall outlet.
   b. Use the included DC and USB cable to charge from any standard car lighter plug.
   c. Use the USB input cable to charge from any standard computer USB port.

The RED light on the battery will go on to confirm that the battery is charging, and will turn off when the internal battery is fully charged. Press the Triangle test button to check that all 4 bars are green to confirm the battery is full.

2. Use the included USB Tip Jack cable and insert into any “OUTPUT” port on the device. (Up to 2 devices can be charged at the same time)
3. Find your compatible tip and push into jack end of cable, and twist to secure.
4. Plug the tip end into the device you wish to charge and check your device screen / LED to see that charging has commenced. The LED light on the battery should turn RED when charging. Check your device’s screen to see when charging is complete.
5. Depending on your device and usage patterns, charging can take 2-5 hours

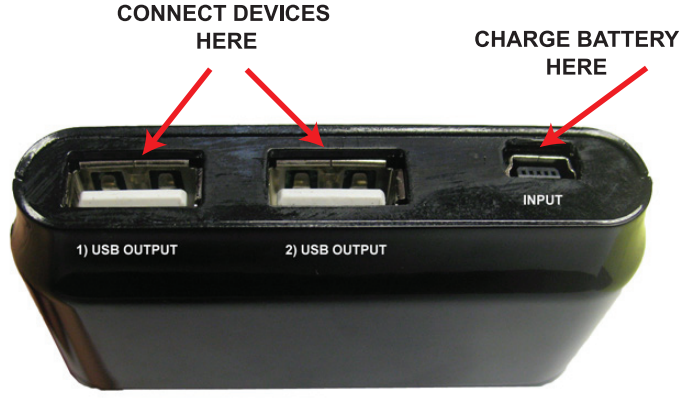

Warranty Information

This product comes with a 1 year warranty that covers defects in materials or workmanship. This warranty is limited to the replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties expressed or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. We will, at our option, repair or replace the products that do not conform to the warranty. We may use functionality equivalent reconditioned/refurbished/remanufactured/pre-owned or new products or parts.

To obtain service please contact a customer support representative at (877)-292-6454 between 8:00 am - 5:00 pm (MST).

Visit www.hoffcobrands.com for more information.

JUST CHARGE IT™
BY
CELLTRONIX®

owned and operated by
hoffco BRANDS
www.hoffcobrands.com

Easy Instructions (see reverse side for detailed instructions)

1. Charge your power pack

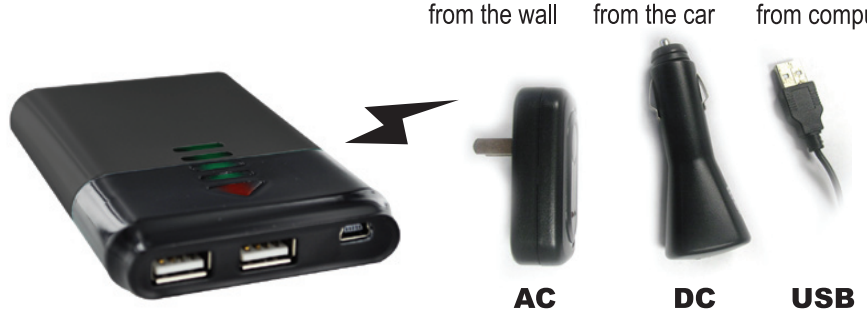

2. Find and attach your tip

3. Connect your device and charge!